

HOW TO INSTALL A BASALT COLUMN FOUNTAIN KIT



Step 1:
Layout appropriate
Matrix and
Pump Canyon
configuration.



Step 2:
Excavate basin to
required size
and depth.




Step 3:
Ensure Matrix &
Pump Canyon fit.



Step 4:
Install Underliner



Step 5:
Install Liner &
Pump Canyon.

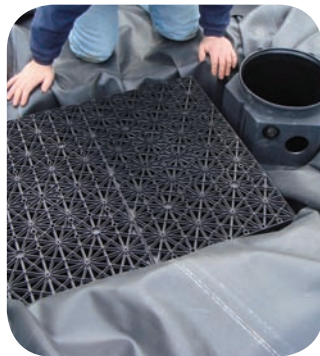

Step 6:
Install Basin Matrix



Step 7:
Install Pump



Step 8:
Run Plumbing Hose



Step 9:
Set Columns



Step 10:
Add Decorative
Gravel & Level.



Step 11:
Finish Edges
with Gravel.



Step 12:
Plug in Pump
and Run!